### Thank you for purchasing this

# LUFTMUSIC

#### LM406 Wireless Remote

# 1 Surface Mount

The LM406 base can be fixed at any convenient position with the 3M tape included in the package.

Note that the direction of the arrow points upwards.

The remote can be removed for recharge by turning counterclockwise.

After recharge, please rotate the remote clockwise, fix the remote back to base.





# 2 Caution


Remote needs to be charged once a year, 5V DC Input (Type C). Suggest to use power bank with 5V output to recharge the remote. The green charging indicator (button ►) (a) will go out when the remote is fully charged.







## GETTING TO KNOW YOUR LM406 MULTIFUNCTION CONTROLLER (MFC)

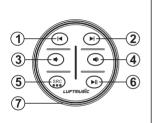

- 1 PREVIOUS TRACK / FAST REWIND
- 2 NEXT TRACK / FAST FORWARD
  - VOLUME UP
  - VOLUME DOWN
- SRC-POWER ON/OFF, SWITCH AUX IN / BT MODES (GREEN LED INDICATION)
- 6) PLAY / PAUSE
- MFC-MULTIFUNCTIONAL CONTORLLER

To pair remote to LM720 or LM760, switch off the head unit, press and hold volume up and down buttons on the remote until display light up with 'REMOTE PAIRED', then VX760R is ready to work.

